


Connectivity of BEST with PC

Step 1:- Physical Connectivity of BEST with PC.

Step 2 :- Installation of TeraTerm Software.

Step 3:- Messaging with Tera Term Software.


Step 1:- Physical Connectivity of BEST with PC.

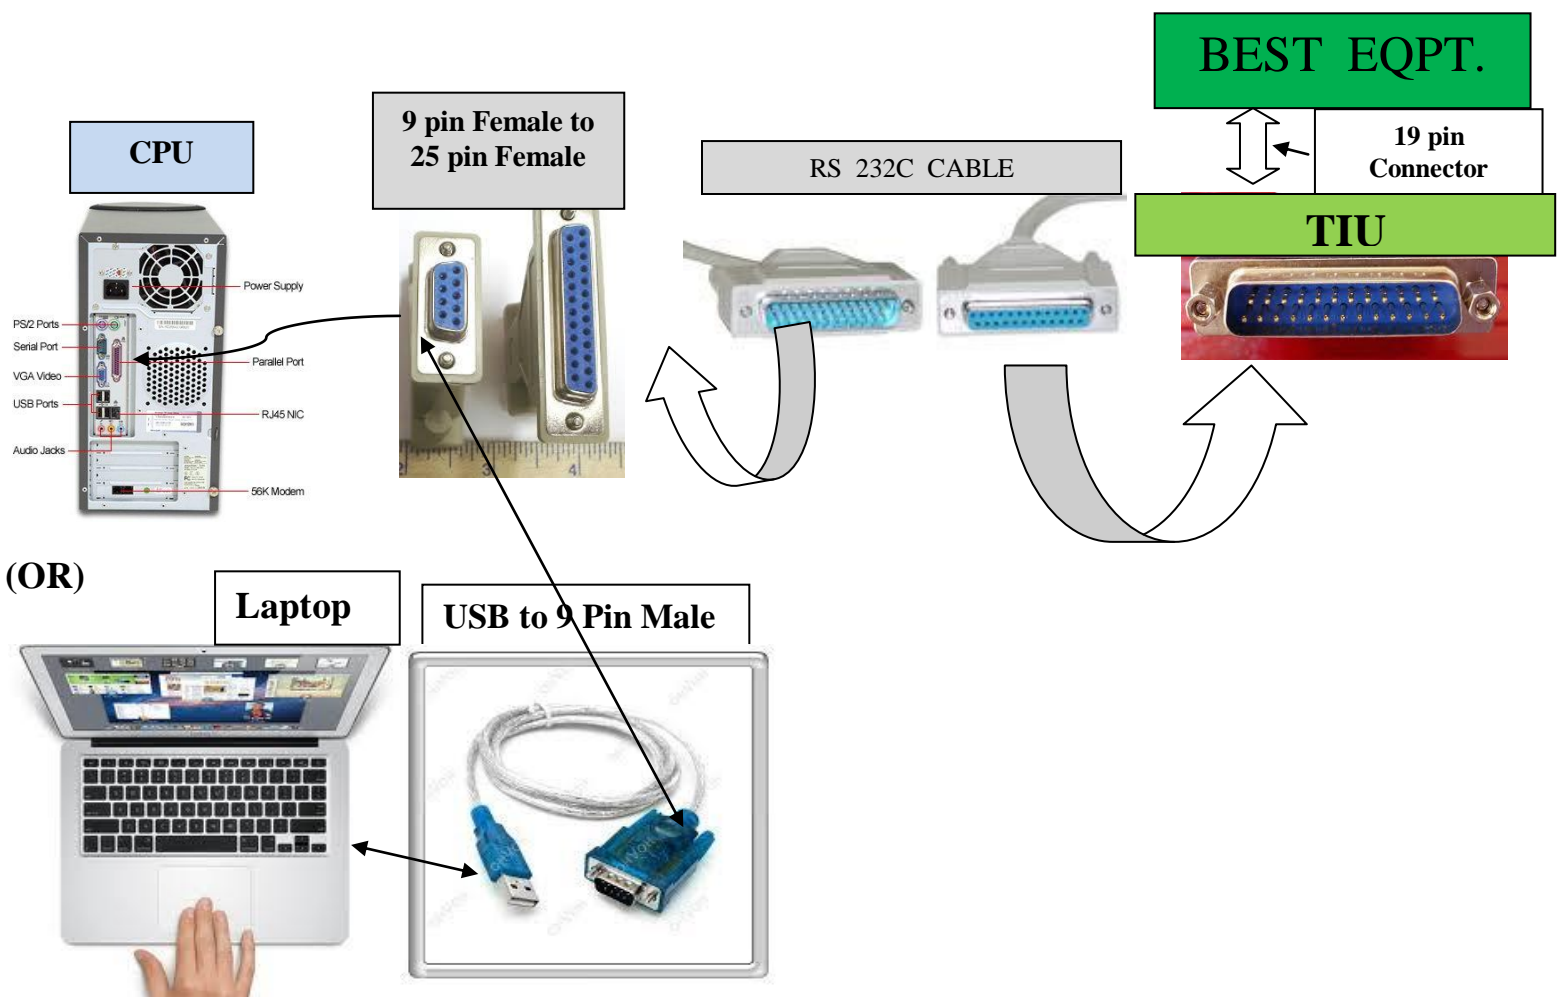


Step 2 :- Installation of TeraTerm Software.

Tera Term Setup


Double click on the **Teraterm-4.80.exe**

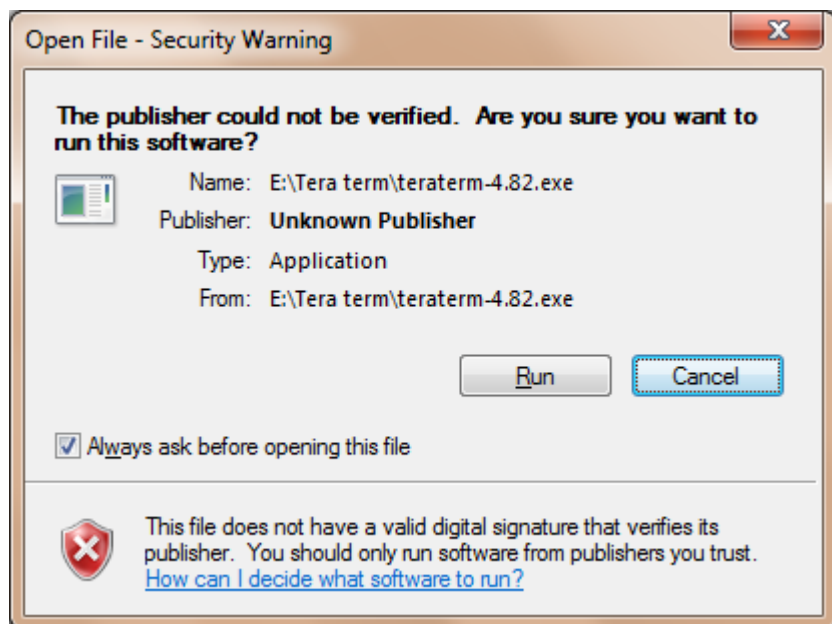


Click on **Run**

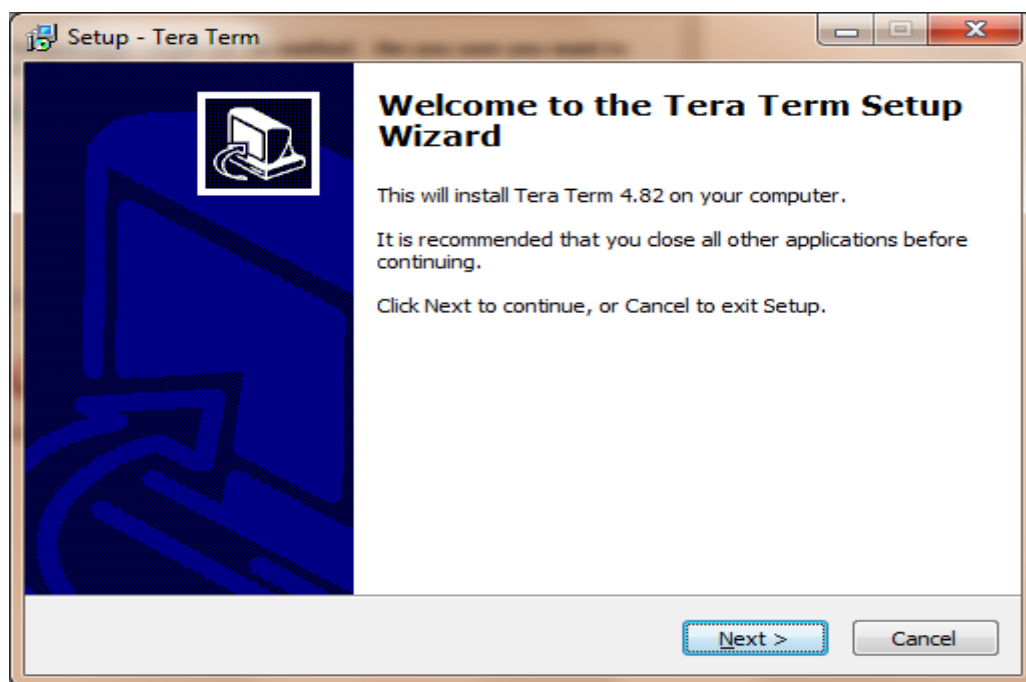


Click on **Next**

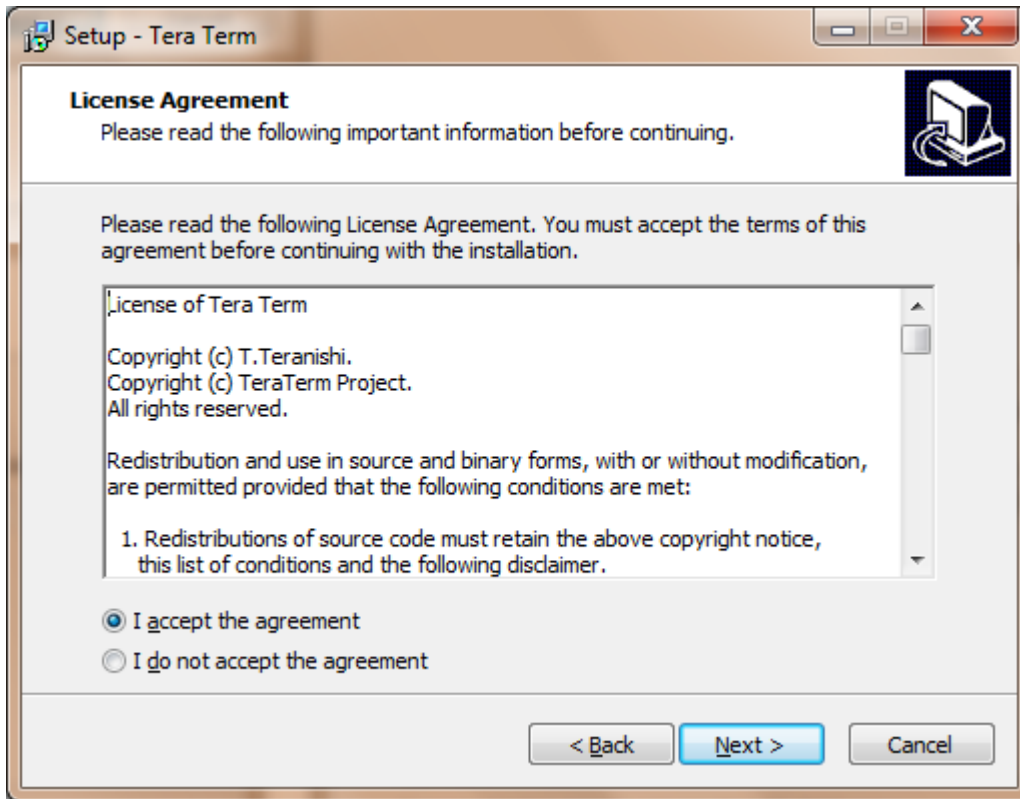


Select I accept the agreement and click on **Next**

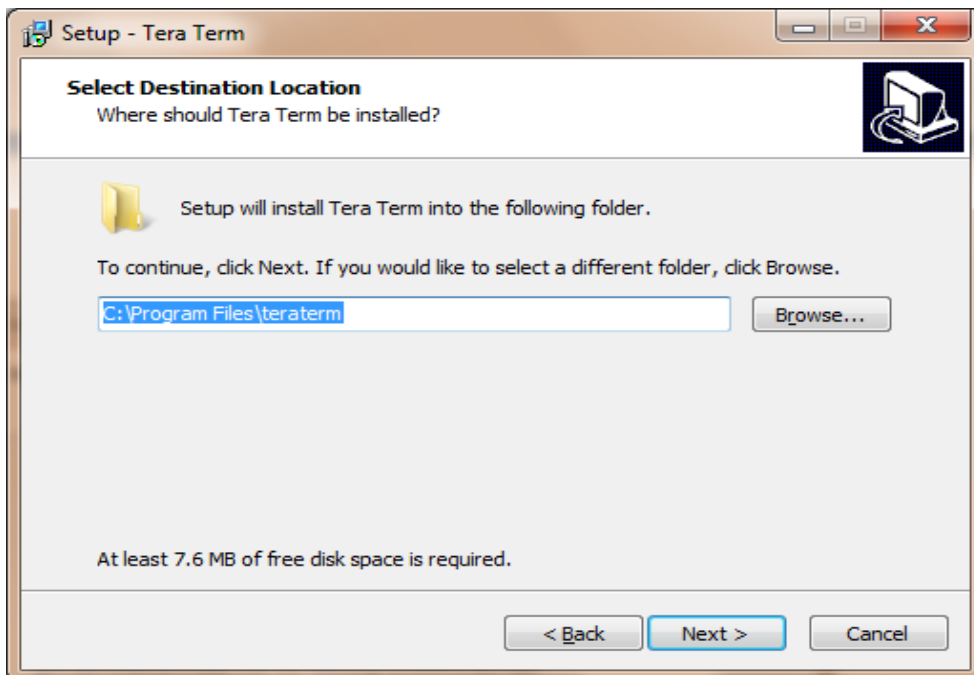


Click on **Next**

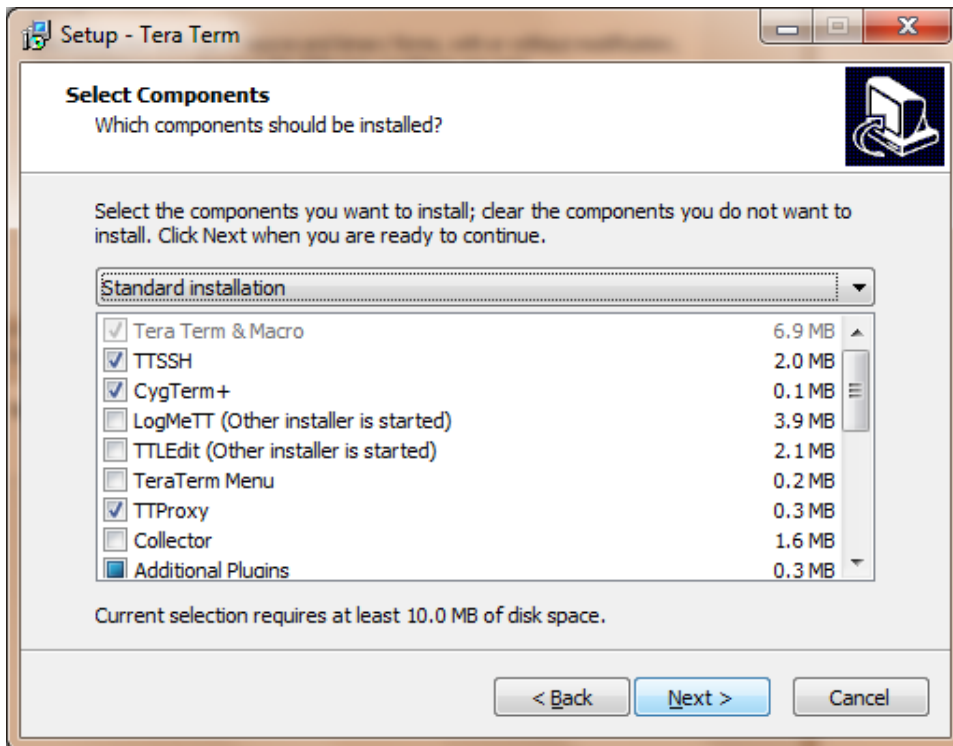


Click on Next

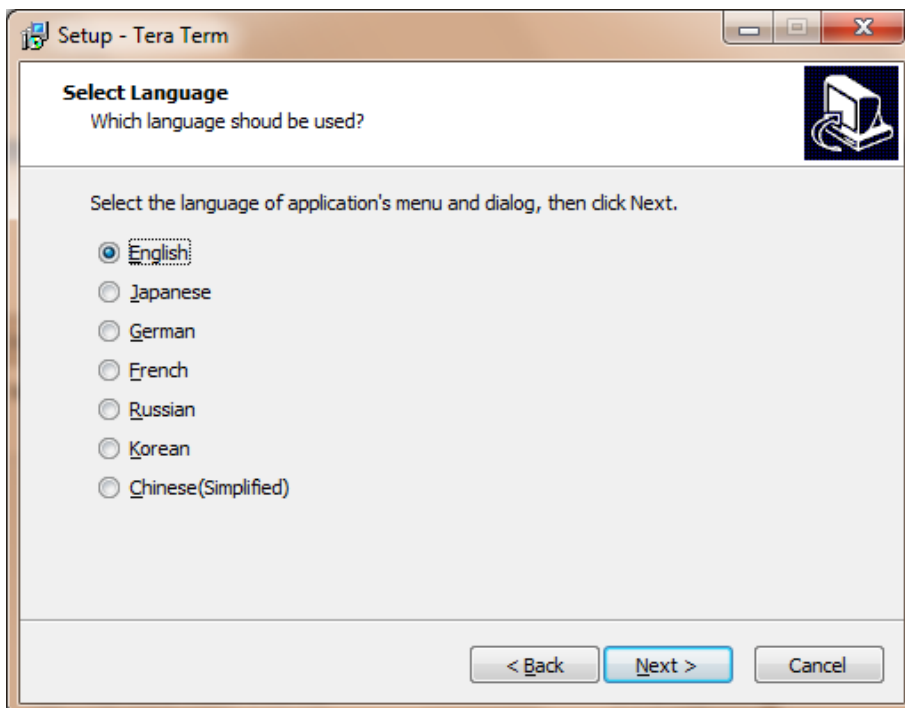


Select English and Click on Next

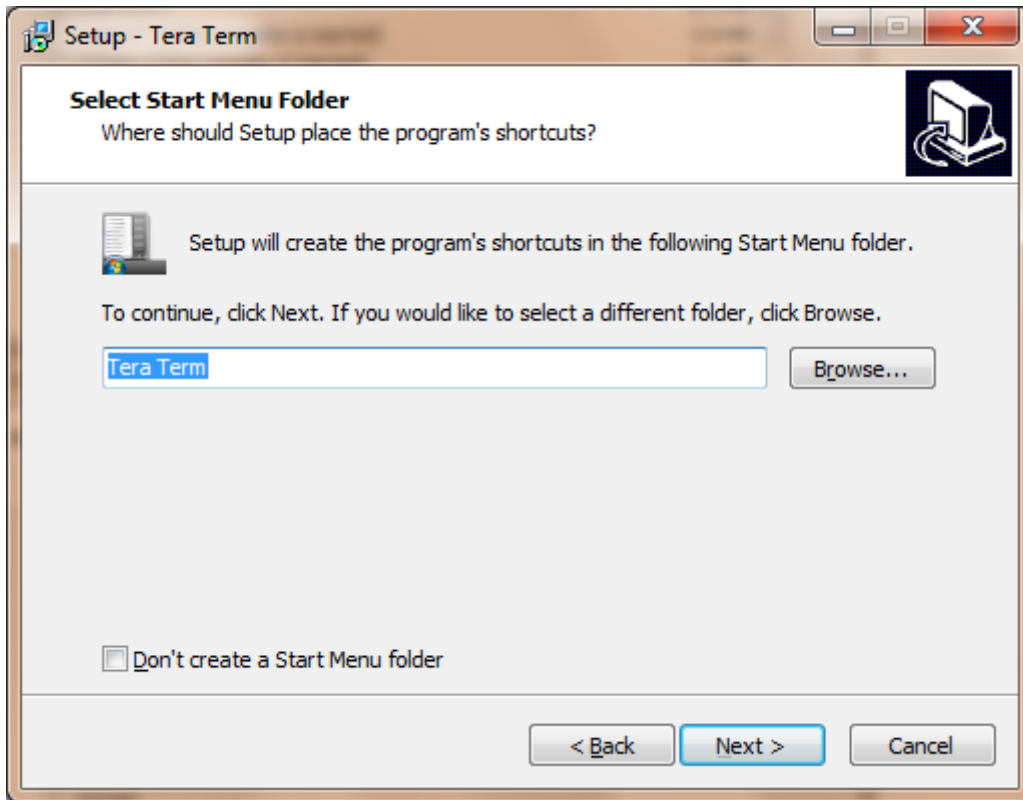


Click on Next

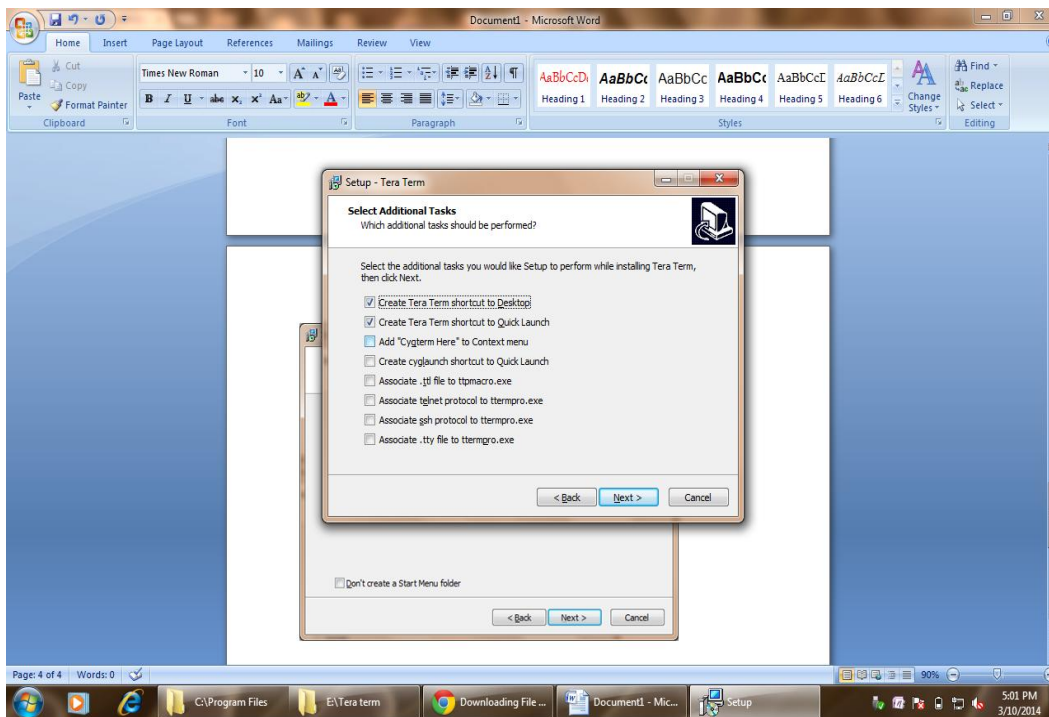


Click on Next

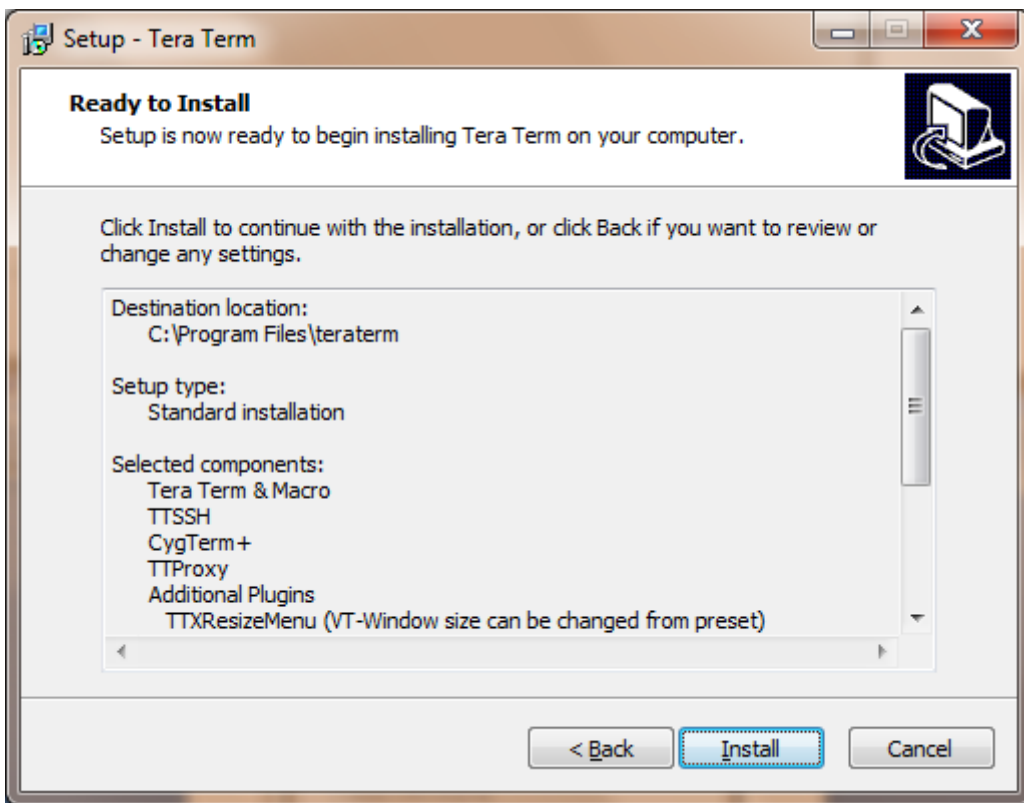

Click on **Next**

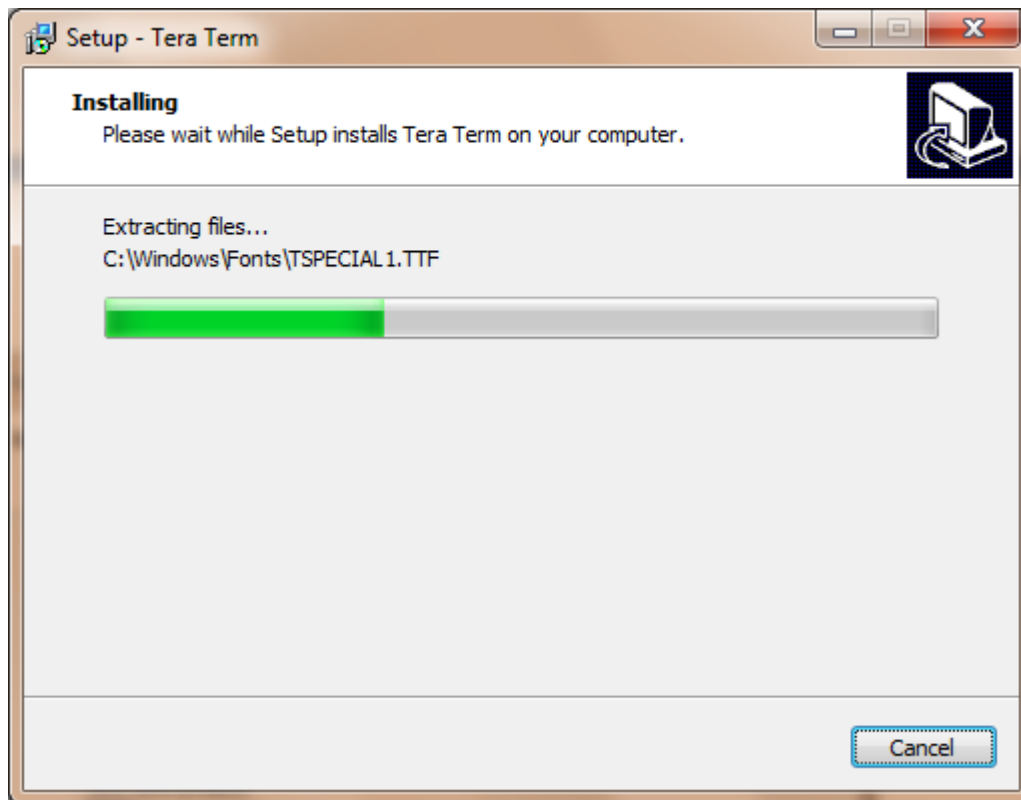

Click on **Install**

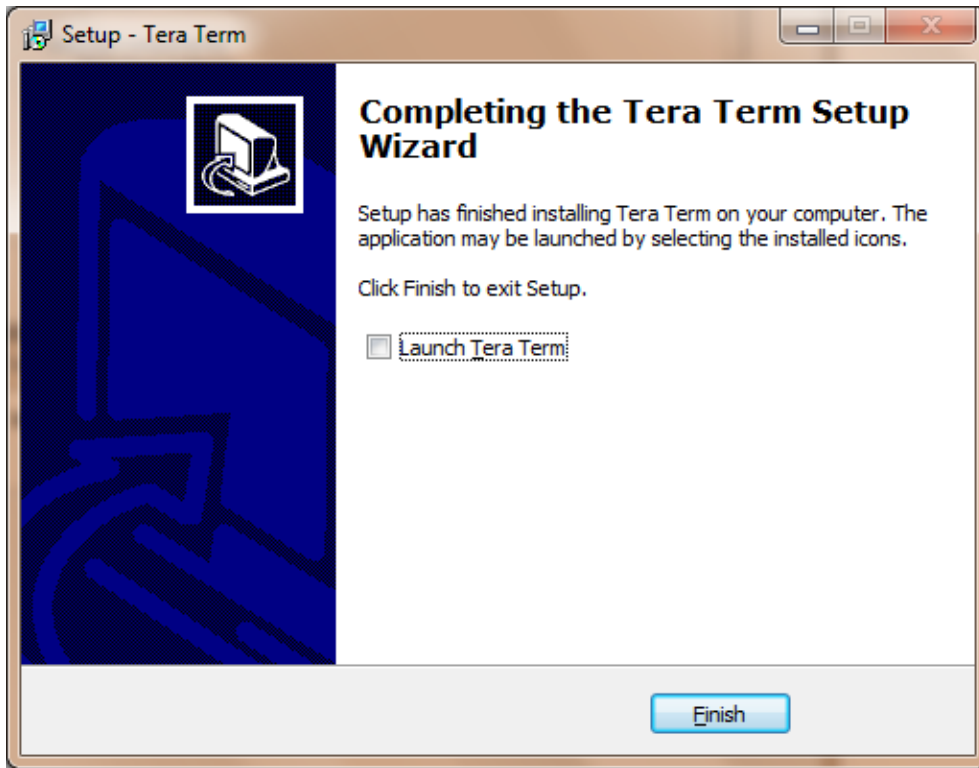


Click on **Finish**

Now the software Installation is complete.


Creating a New Connection



After Installation of the software Double click on the **Tera Term** Desktop Shortcut

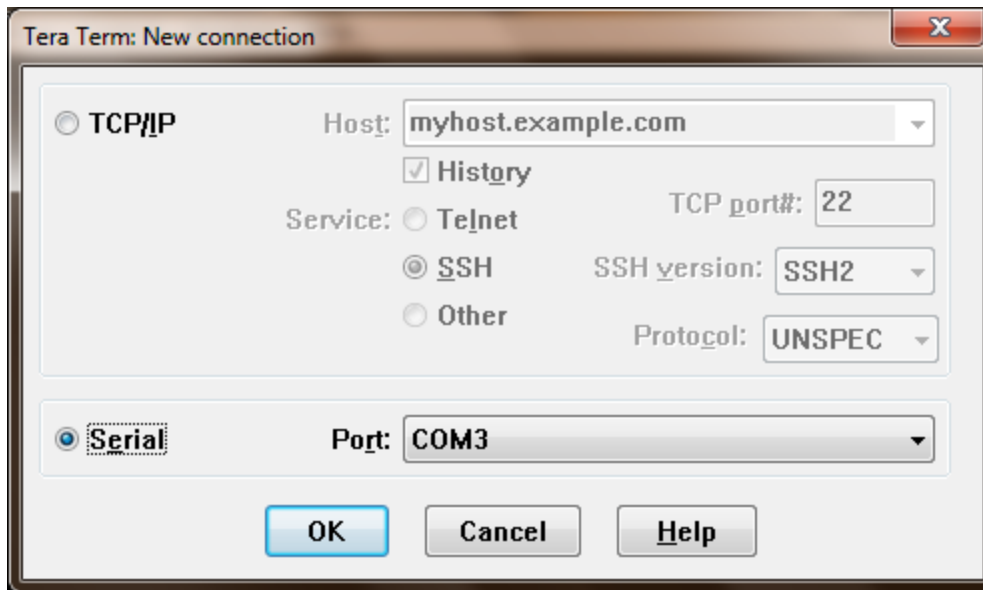


Select **Serial** option and select the **COM** port

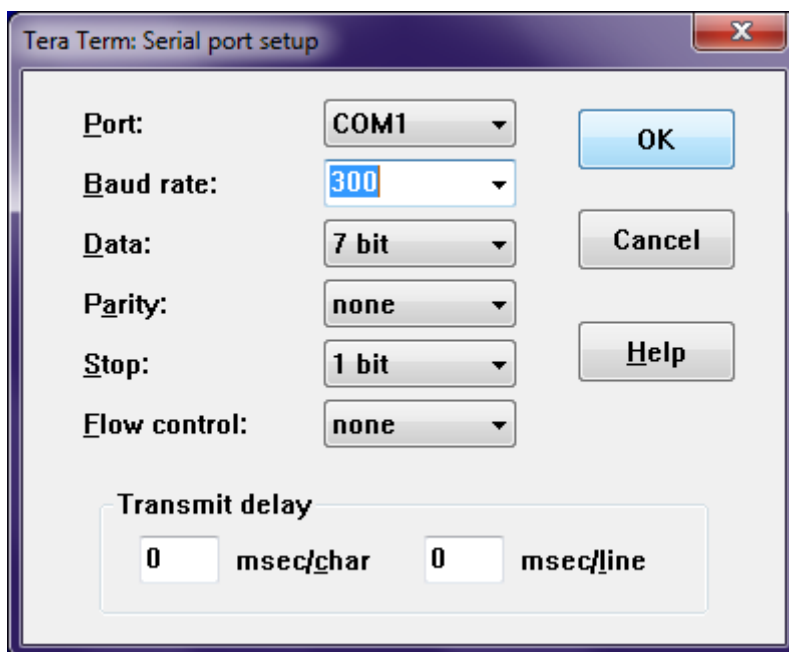


Set the Com port settings as mentioned above and click on OK.

Now switch on the BEST Eqpt. It will show the self test in the Tera Term window as shown below

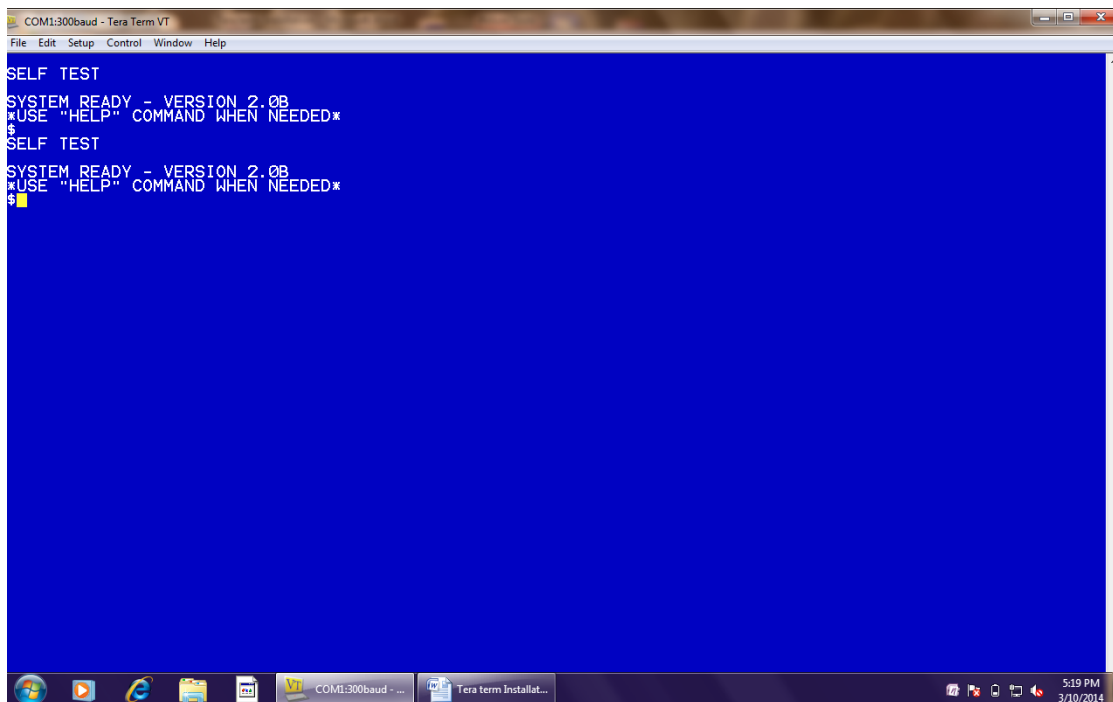

Now go to the **Setup** Menu of the Tera Term window and **save** the setup.

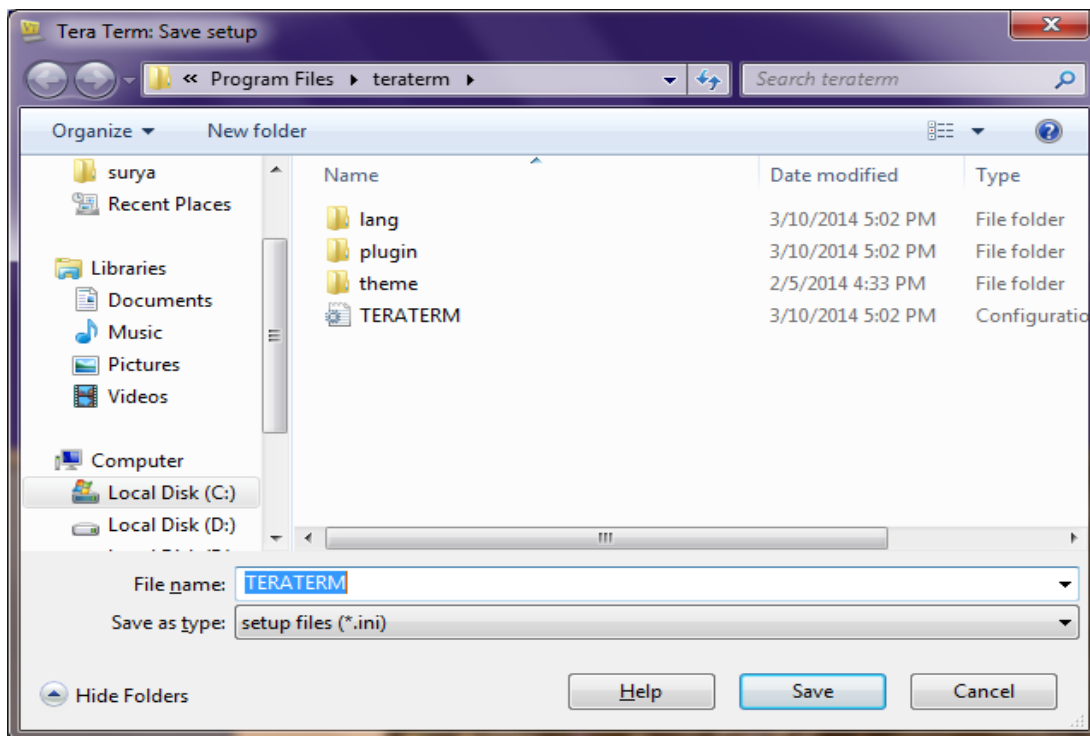

Click on **Save**.